






DUROVIN
BATHROOMS

Glass Canopy
2 Holes
Installation Manual


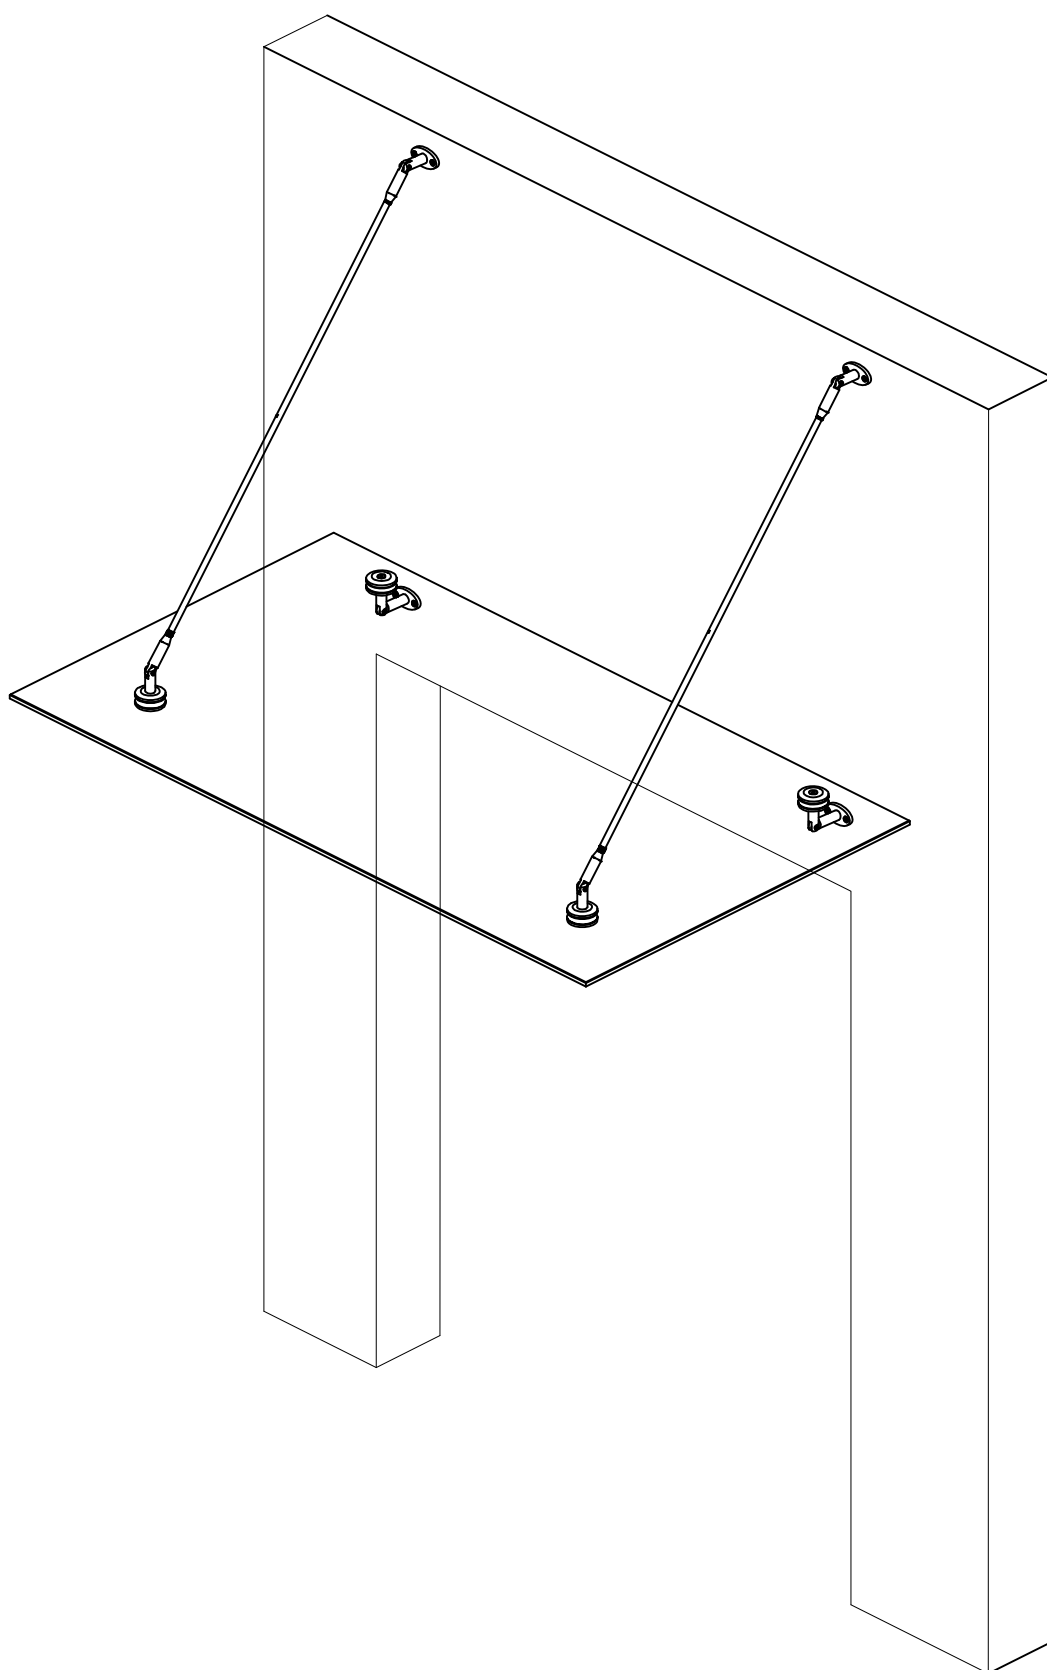


Glass Canopy
2 Hole




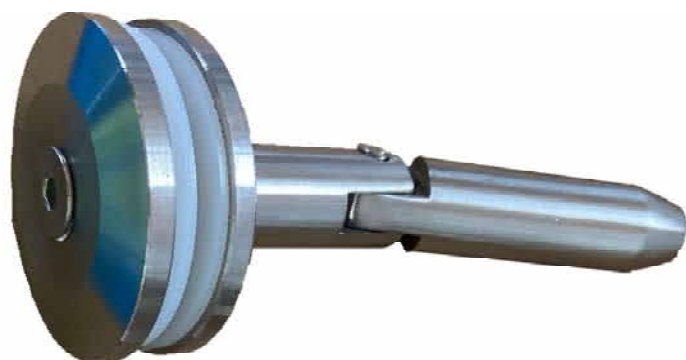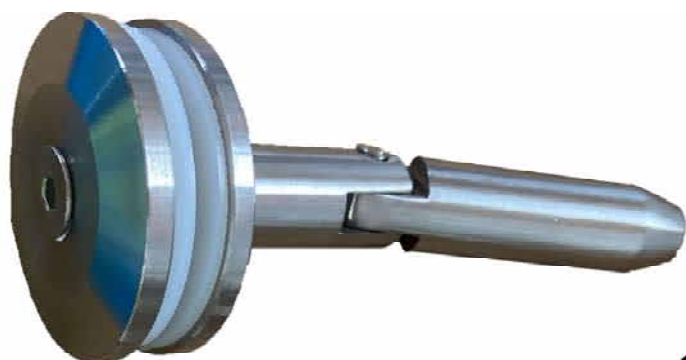

02

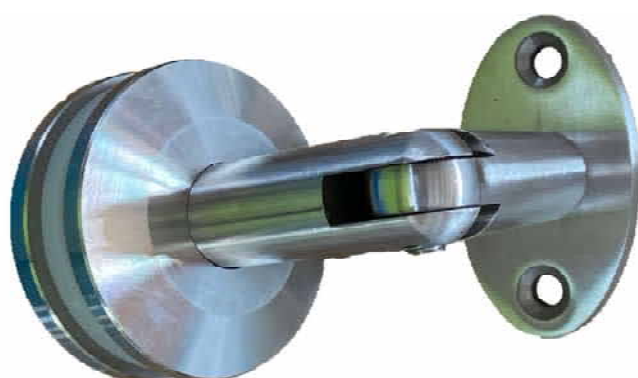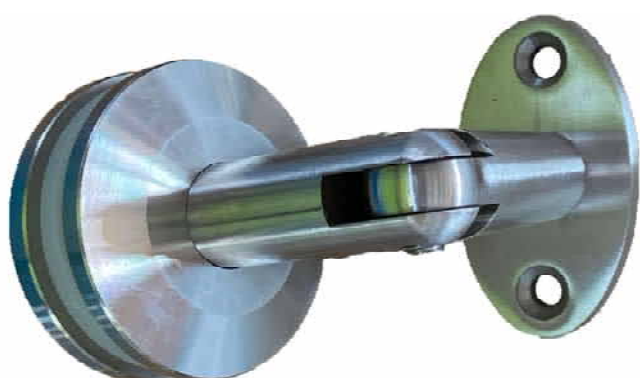


07

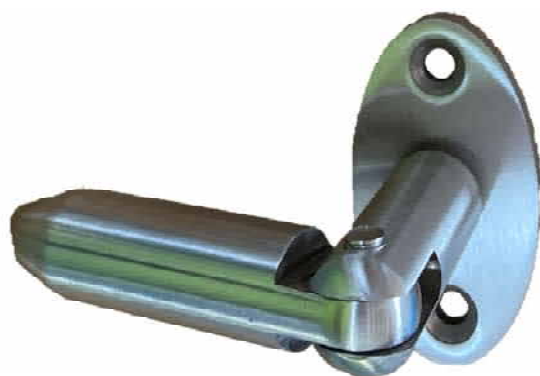









04




05-06

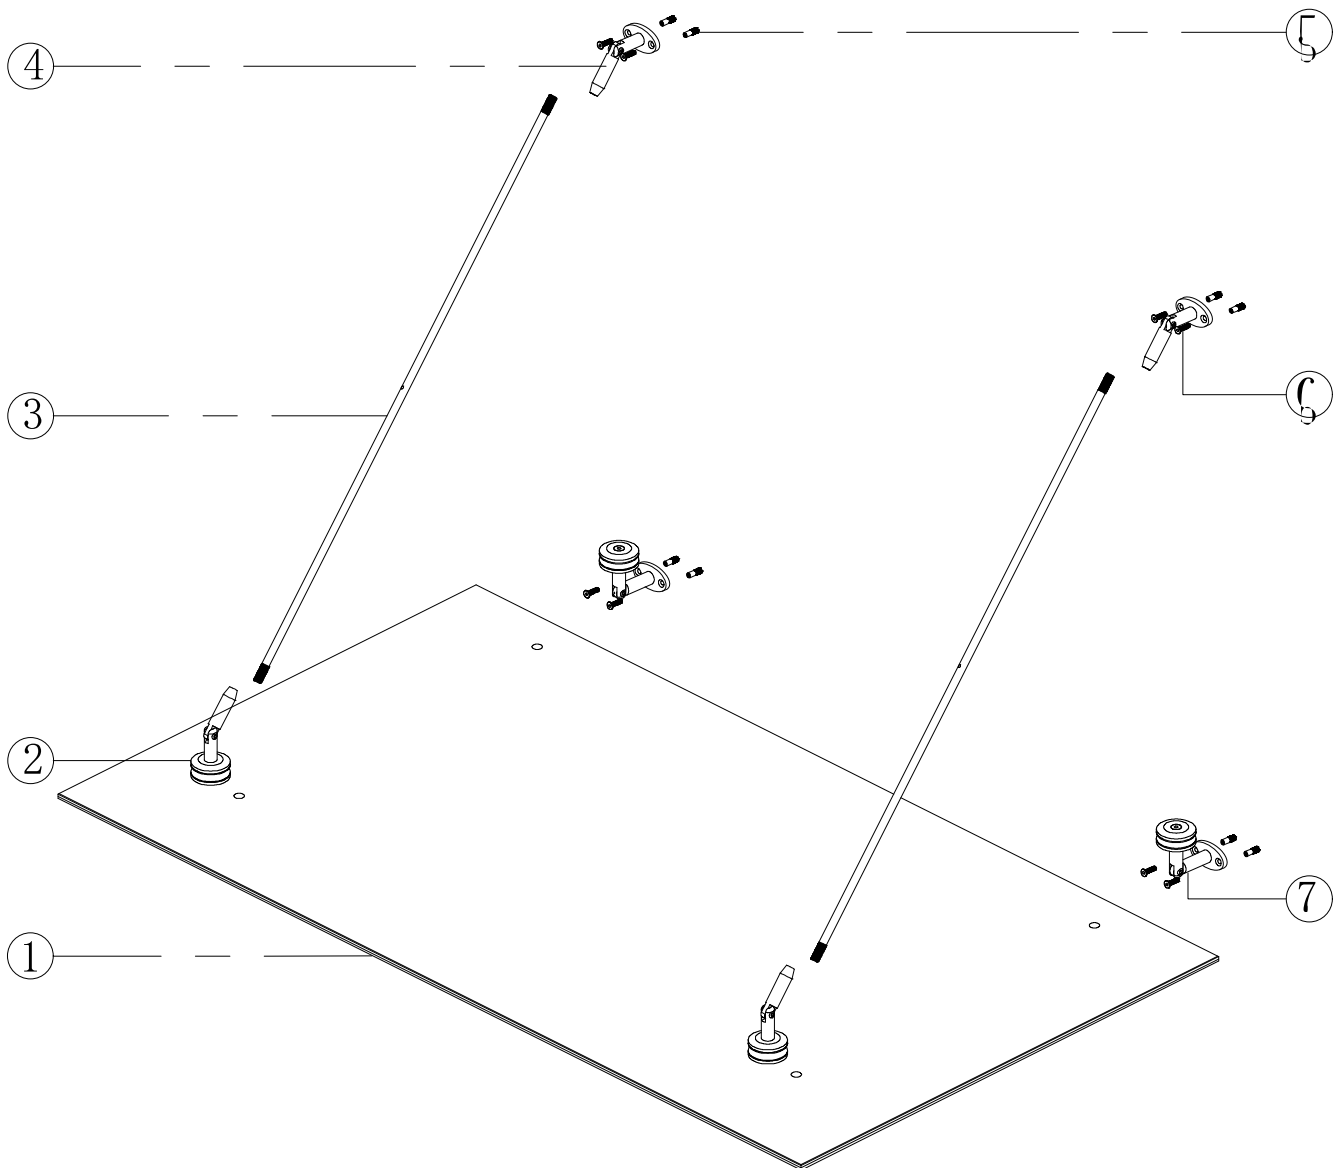

Required tools

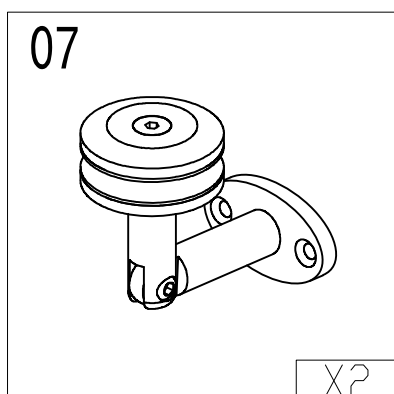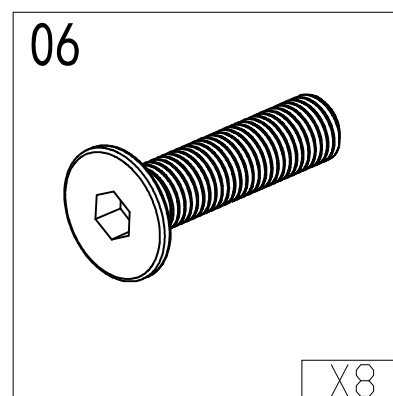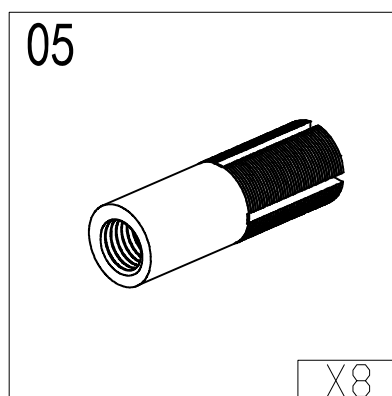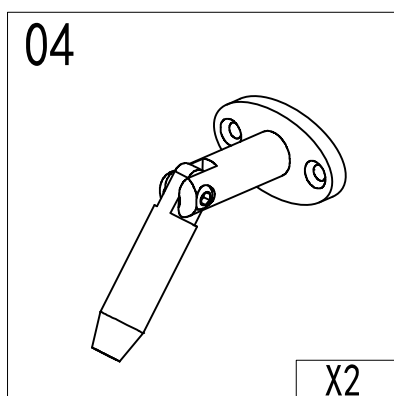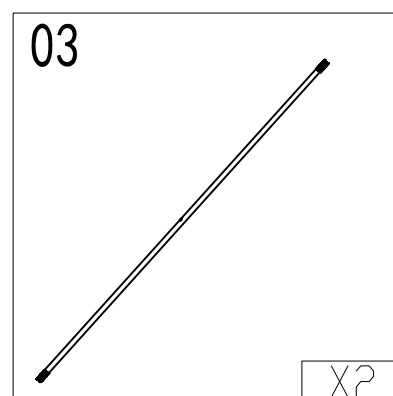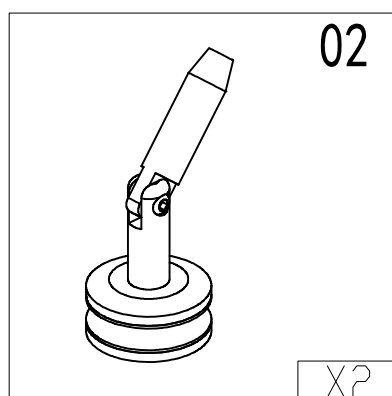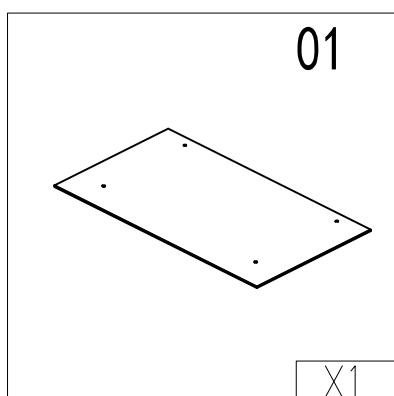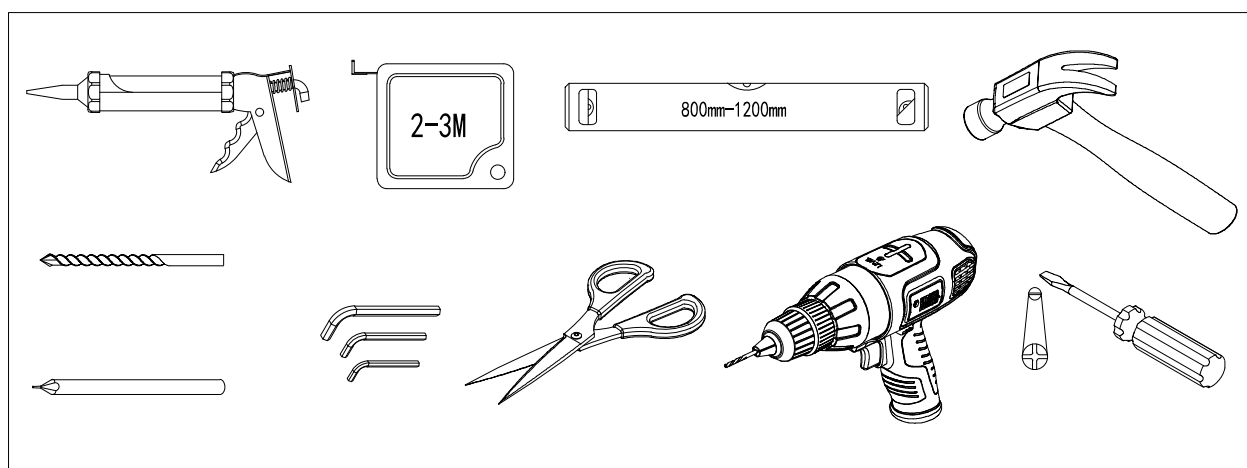

800MM-1000MM



2-3M

