



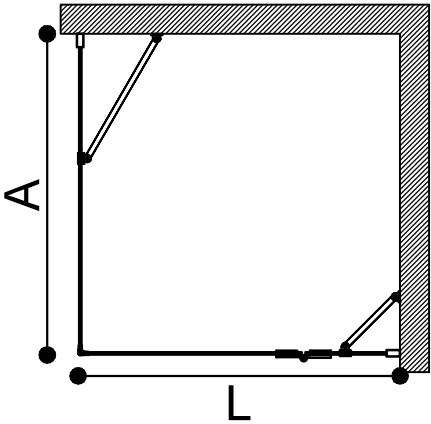


DUROVIN
BATHROOMS

Ravenna 28 L Shape
Installation Manual

Ravenna28

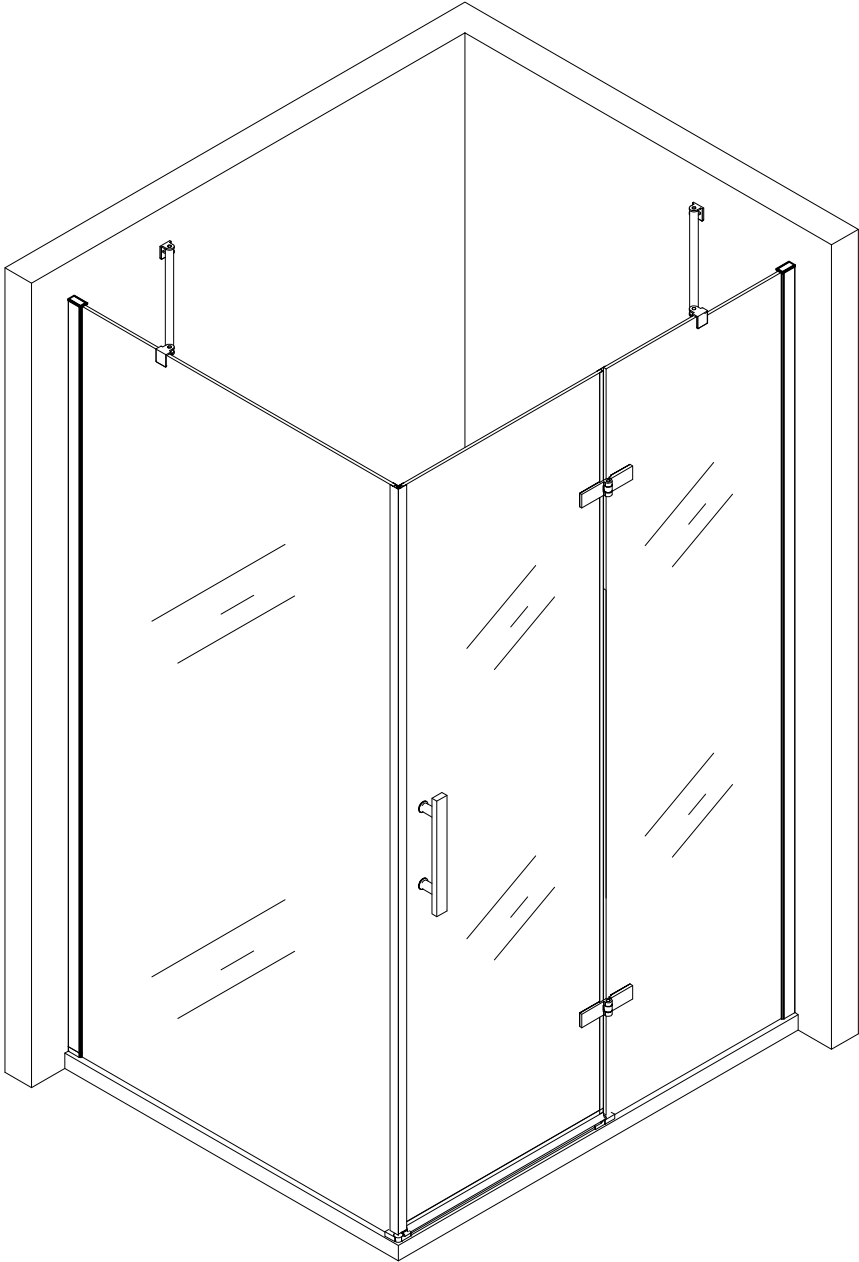

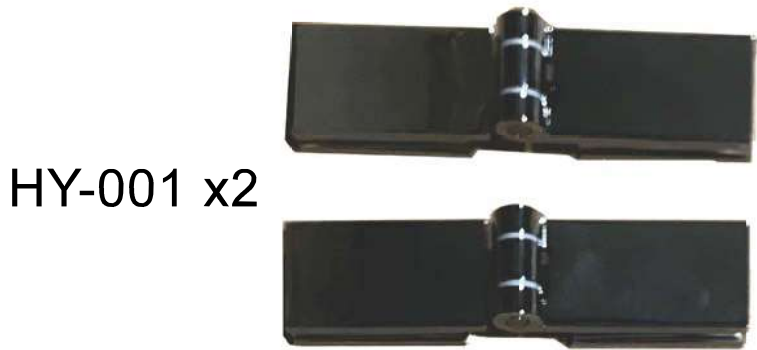

HY-001 x2



Slj-032/33 x1



D002SL x2



D001SL x2



ST4*40 x12




ST4*12 x6



Ø6 x12



LG-001 x2

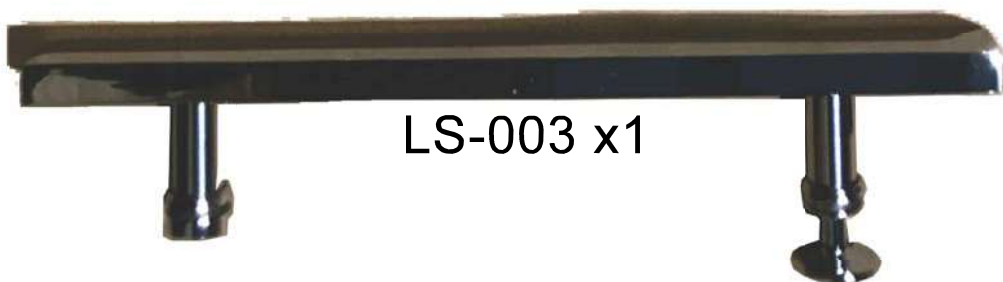

LS-003 x1



DL-SLJ-034 x6



D001-1950 X2



309b4-6 X1



308GA-6 X1




309D2-6 X1



D017 X1 X1

Installation manual

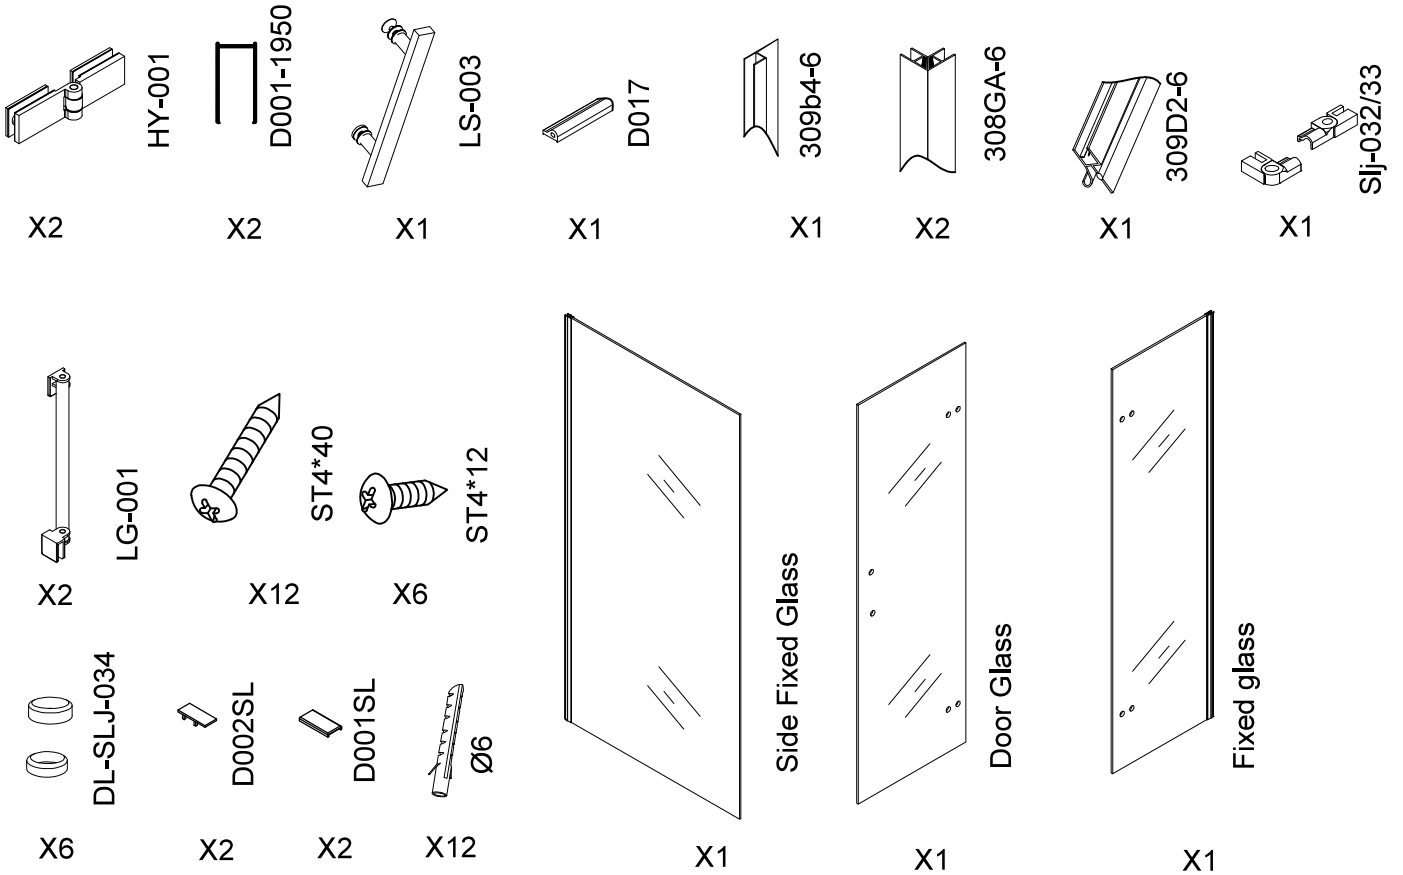

Tools for installation




(A)




(B)




(C)




(D)




(E)



(F)






(G)









(H)

1:

Tools for installation

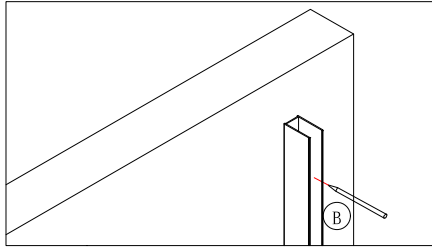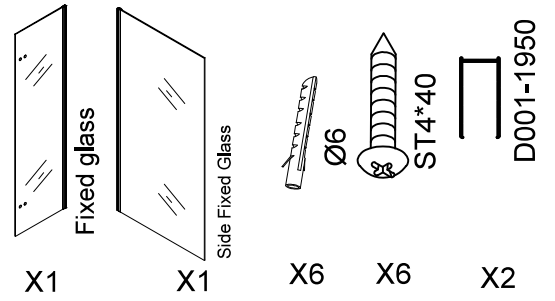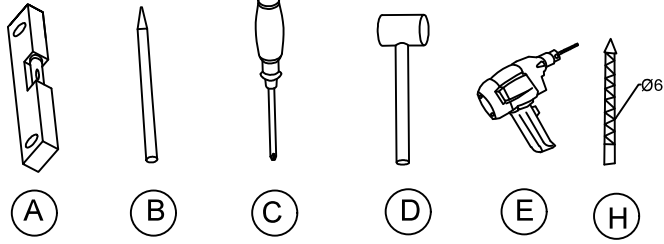


Wall Aluminum Bar

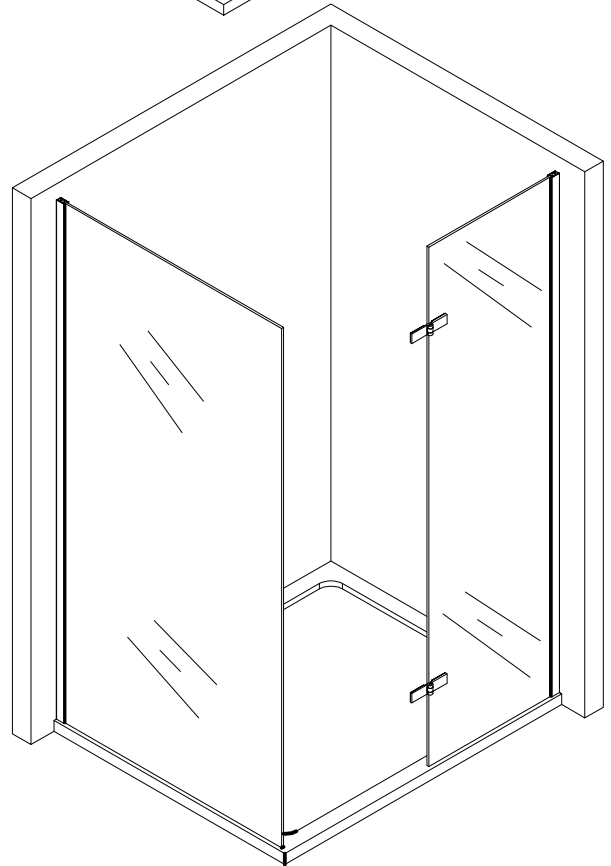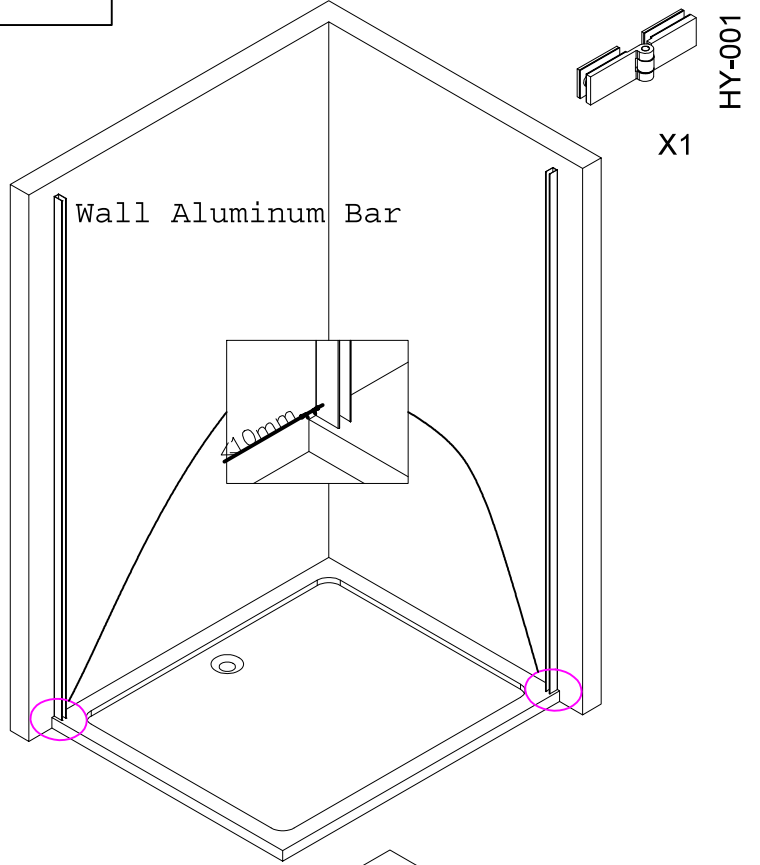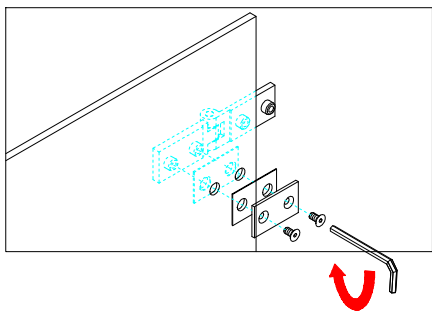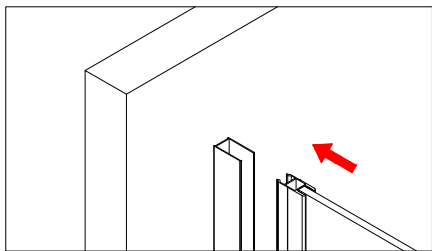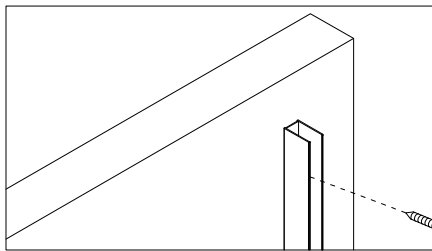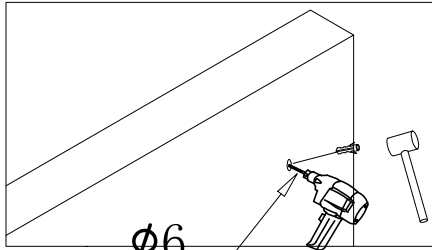

2

2:




309b4-6

X1




308GA-6

X2








309D2-6

X1




LS-003

X1

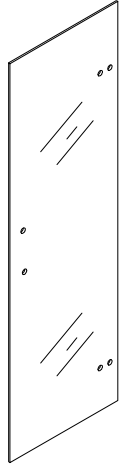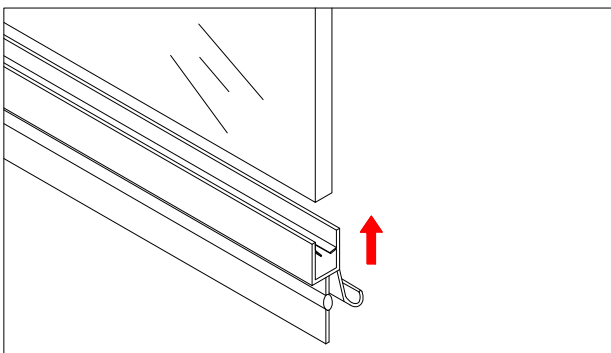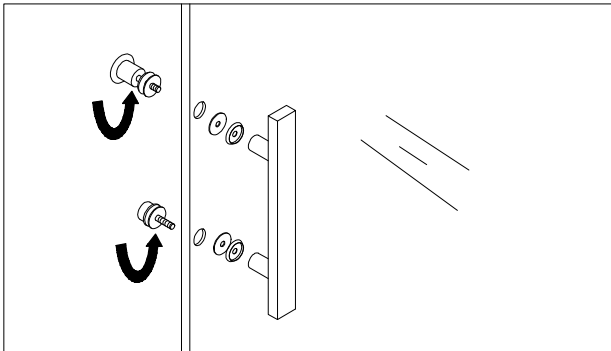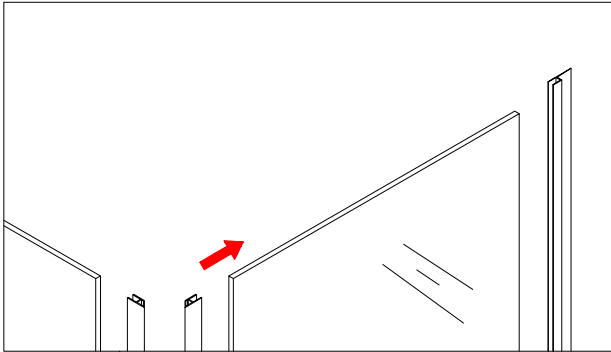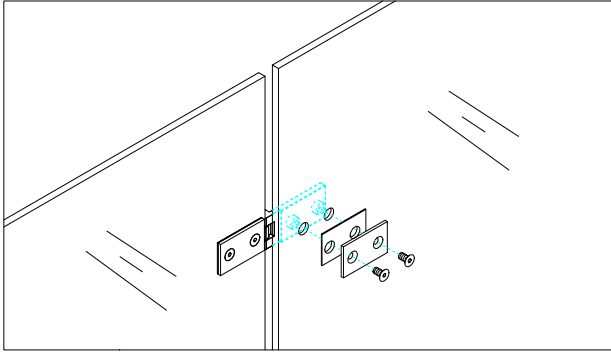








Door Glass

X1

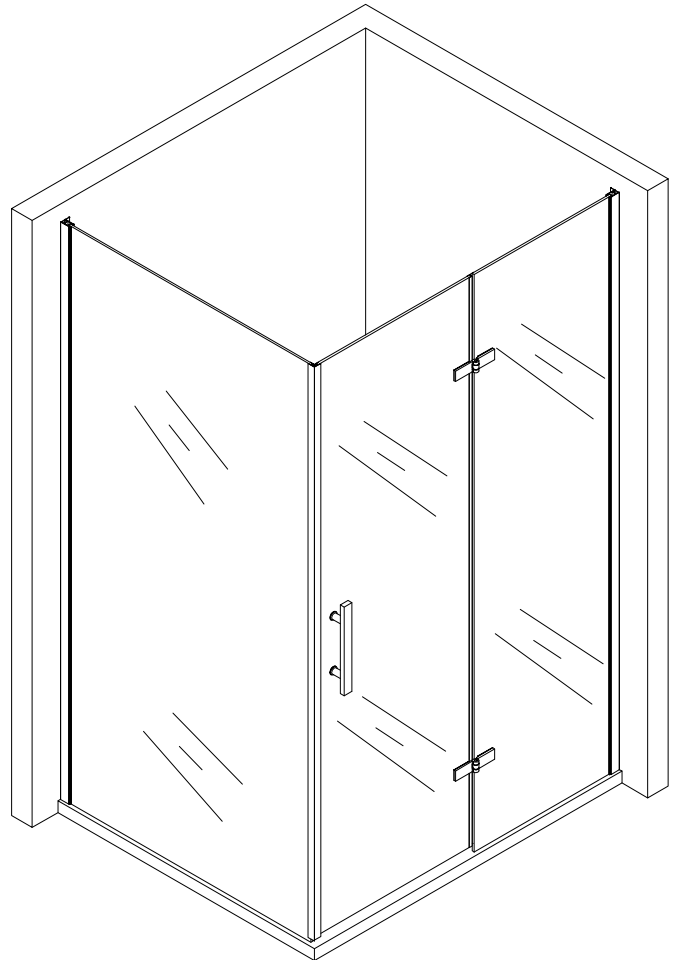

3.

Tools for installation

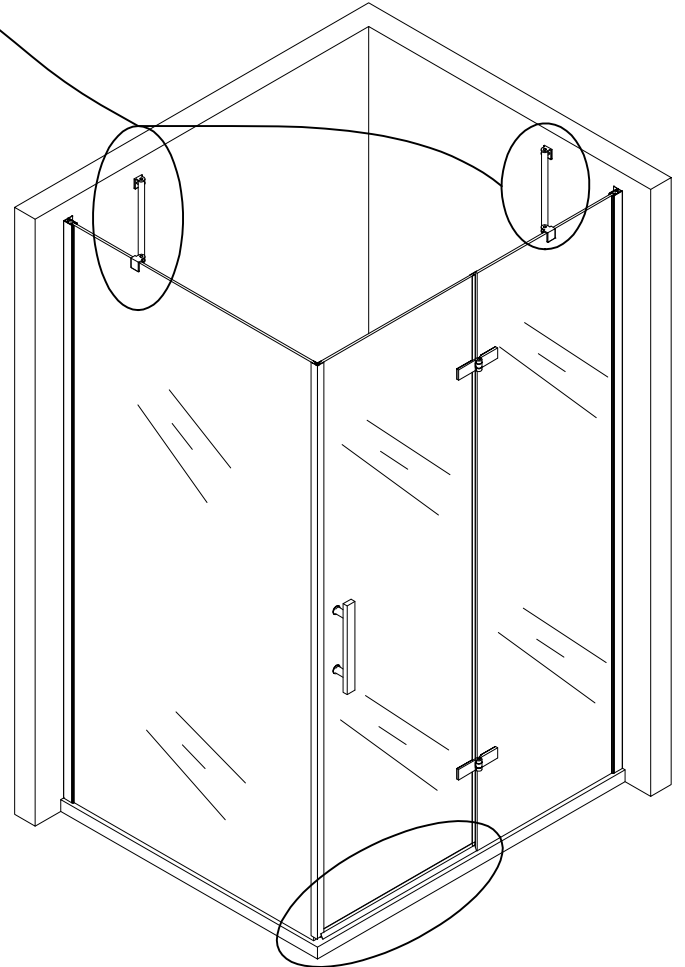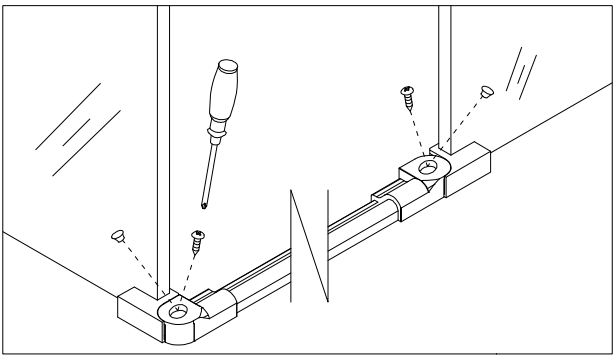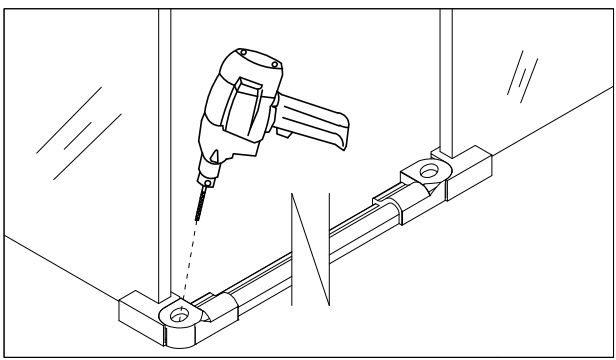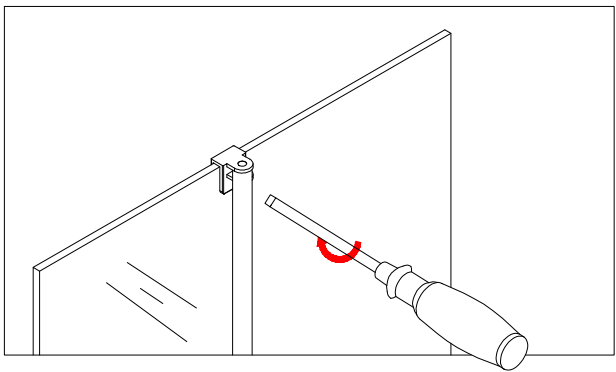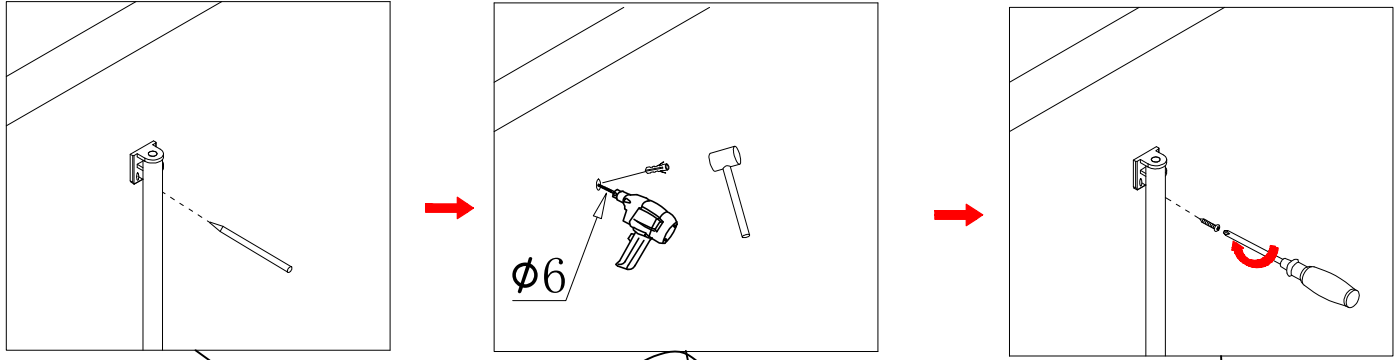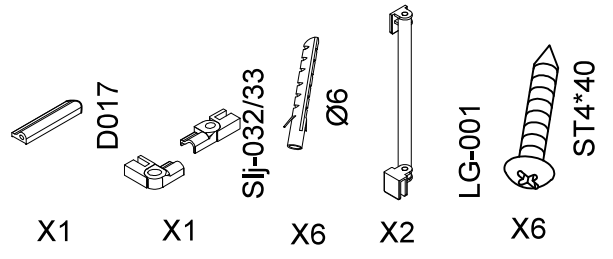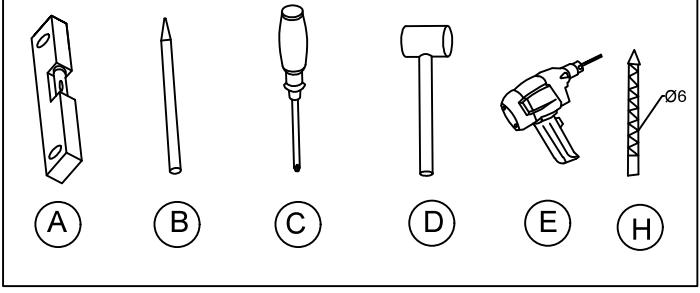

4: Tools for installation

